



Installation and operating instructions

AUZ 010 – vandal-resistant stainless-steel standing closet, for the disabled, back drain; AUZ 010 INV - for the disabled


BASIC TECHNICAL INFORMATION:

Dimensions AUZ 010:	430 x 360 x 560 mm
Dimensions AUZ 010 INV:	480 x 360 x 710 mm
Weight:	20 kg
Bearing capacity:	200 kg
Min. water flow:	70 l/min
Outlet diameter:	89 mm
Diameter of flushing pipe:	34 mm – for delivered sealing gasket; up to 50 mm if other gasket will be used (inner dimension of inlet opening is 56 mm)
Weblink:	AUZ 010/AUZ 010 INV


Description and intended use

- AUZ 010 is a stainless steel floor standing water-closet with rear outlet to the wall.
- The casing of the toilet is made of 1,2 mm thick stainless steel; the part for sitting is made of 2 mm thick stainless steel.
- Standard version type of AUZ 010 does not include the plastic seat.
- AUZ 010 closet is intended for pressure flushing systems as well as for the cistern flushing systems
- AUZ 010 INV is a stainless-steel standing WC in matt design for the disabled.
- The closet is based on the standard AUZ 010, which is heightened and lengthened to fulfil the directive regarding products for disabled persons.
- The closet includes a removable back support recommended by the Wheelchair Association.

AUZ 010

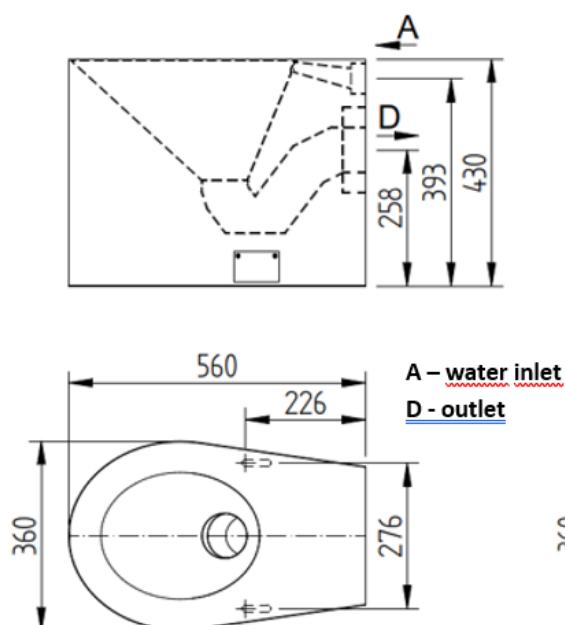

AUZ 010 INV

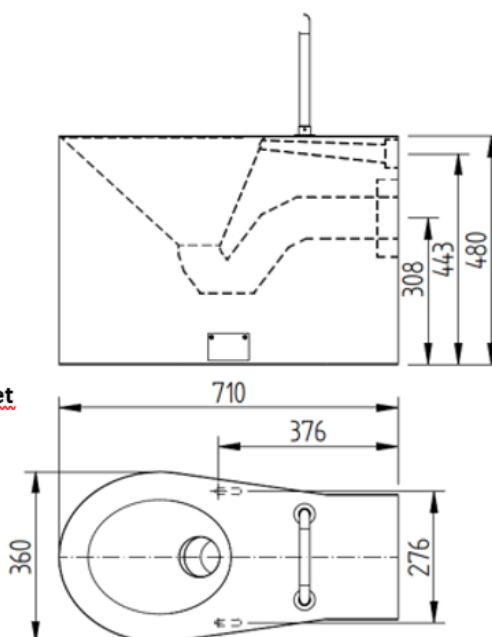



Assembly

1. Set-up the sewerage d 110 mm finished with end-neck of the toilet. The end-neck must be at the floor level or up to 25 mm beneath the floor. It must not protrude over the floor.
2. Place the closet on prepared outlet and mark the anchor points. These points are accessible after unscrewing the protecting covers of anchoring bolts in the lower part of the casing.
3. Drill the holes for dowels d 12. Supplied dowells are intended for fixing the toilet to the concrete floor. When using another type of floor it is necessary to select the appropriate anchor elements.
4. Place the toilet on the outlet and water supply pipe.
5. Tighten the toilet well to the floor by means of attached screws.
6. Screw back the protecting covers of anchoring bolts.

Note:

- The toilet can also be mounted with a gap between the back of the toilet and the wall - in this case, the anchor holes in the floor need to be moved and the water supply and drain need to be extended accordingly.

Complete delivery

Stainless steel toilet	1 pc
Inlet sealing gasket	1 pc

Maintenance and cleaning

- The device was made from the stainless steel of quality corresponding with ČSN 17 240 (AISI 304) standard and, therefore, it must not be operated in chemically-aggressive environment and
- **Preparations containing chlorine must not be used for its cleaning!!**
- Cleaning agents by WÜRTH are recommended:
 - Metal renewal agent - Order No. 893 121 1
 - Stainless steel spray treatment - Order No. 0893 121 - K.
- If corrosion has already occurred, it can be removed with a cleaner INNOSOFT B 570 from the company Emergo.