



Installation and operating instructions

AUZ 04 INV – Stainless steel floor mounted toilet for disabled – vandal

BASIC TECHNICAL INFORMATION:




Dimensions:	438 x 360 x 710 mm
Weight :	20 kg
Bearing capacity:	200 kg
Min. water flow:	70 l/min
Outlet diameter:	89 mm
Diameter of flushing piep:	34 mm – for delivered sealing gasket; up to 50 mm if other gasket will be used (inner dimension of inlet opening is 56 mm)
Weblink:	AUZ 04 INV
resistant	

Description and intended use

- AUZ 04 INV is a stainless free-standing toilet for disabled people.
- The casing of the toilet is made of 1,2 mm thick stainless steel; the part for sitting is made of 2 mm thick stainless steel.
- Standard version type of AUZ 04 INV does not include the plastic seat.
- Closet is intended for pressure flushing systems as well as for the cistern flushing systems

Assembly

- Set-up the sewerage d 110 mm finished with end-neck of the toilet. The end-neck must be at the floor level or up to 25 mm beneath the floor. It must not protrude over the floor.
- Place the closet on prepared outlet and mark the anchor points. These points are accessible after unscrewing the protecting covers of anchoring bolts in the lower part of the casing.
- Drill the holes for dowels d 12. Supplied dowells are intended for fixing the toilet to the concrete floor. When using another type of floor it is necessary to select the appropriate anchor elements.
- Place the toilet on the outlet and water supply pipe.
- Tighten the toilet well to the floor by means of attached screws.
- Screw back the protecting covers of anchoring bolts.

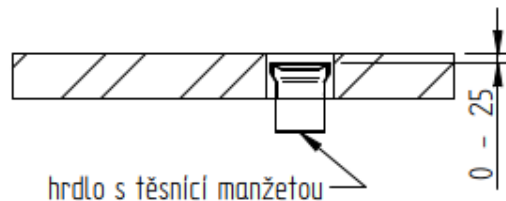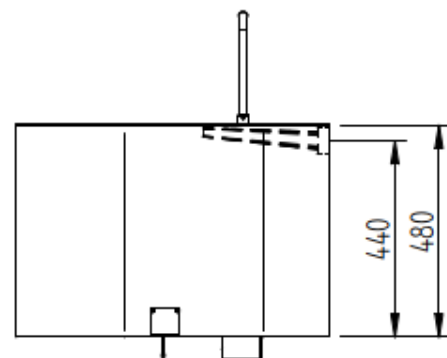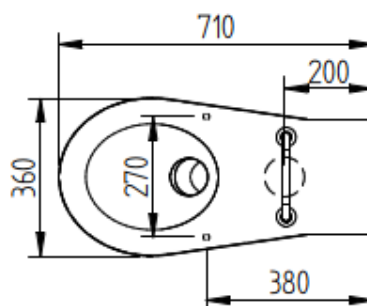

Complete delivery

Stainless steel toilet	1 pc
Inlet sealing gasket	1 pc
Dowel d 12, anchoring bolts M8 x 90, washer	4 pcs
Stainless steel inbus wrench 6 x 16	4 pcs

Maintenance and cleaning

- The device was made from the stainless steel of quality corresponding with ČSN 17 240 (AISI 304) standard and, therefore, it must not be operated in chemically-aggressive environment and



- **Preparations containing chlorine must not be used for its cleaning!!**

- Cleaning agents by WÜRTH are recommended:

- Metal renewal agent - Order No. 893 121 1
- Stainless steel spray treatment - Order No. 0893 121 –
K.

neck with sealing cuff